




Paragon Furniture  
www.paragoninc.com  
1-800-451-8546

## ASSEMBLY INSTRUCTIONS FOR EPOXY OR BUTCHER BLOCK TOPS BULK PACKED

PLACE MARKING FIXTURE ON THE CORNER  
AND USE A MARKER TO MARK THE 4 CORNERS

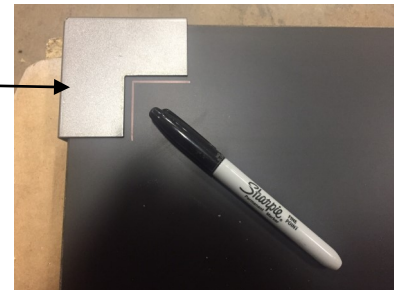

REMOVE FILM FROM DOUBLE FACED TAPE  
THAT IS APPLIED TO THE METAL FRAME.  
ALIGN FRAME WITH MARKS AND PRESS  
DOWN FIRMLY.

NOTE: IF YOU HAVE BUTCHER BLOCK TOPS  
THERE WILL BE 3" SCREWS SUPPLIED ALSO

