





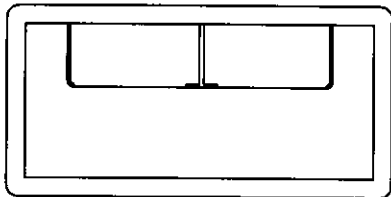


PARAGON
FURNITURE INC.

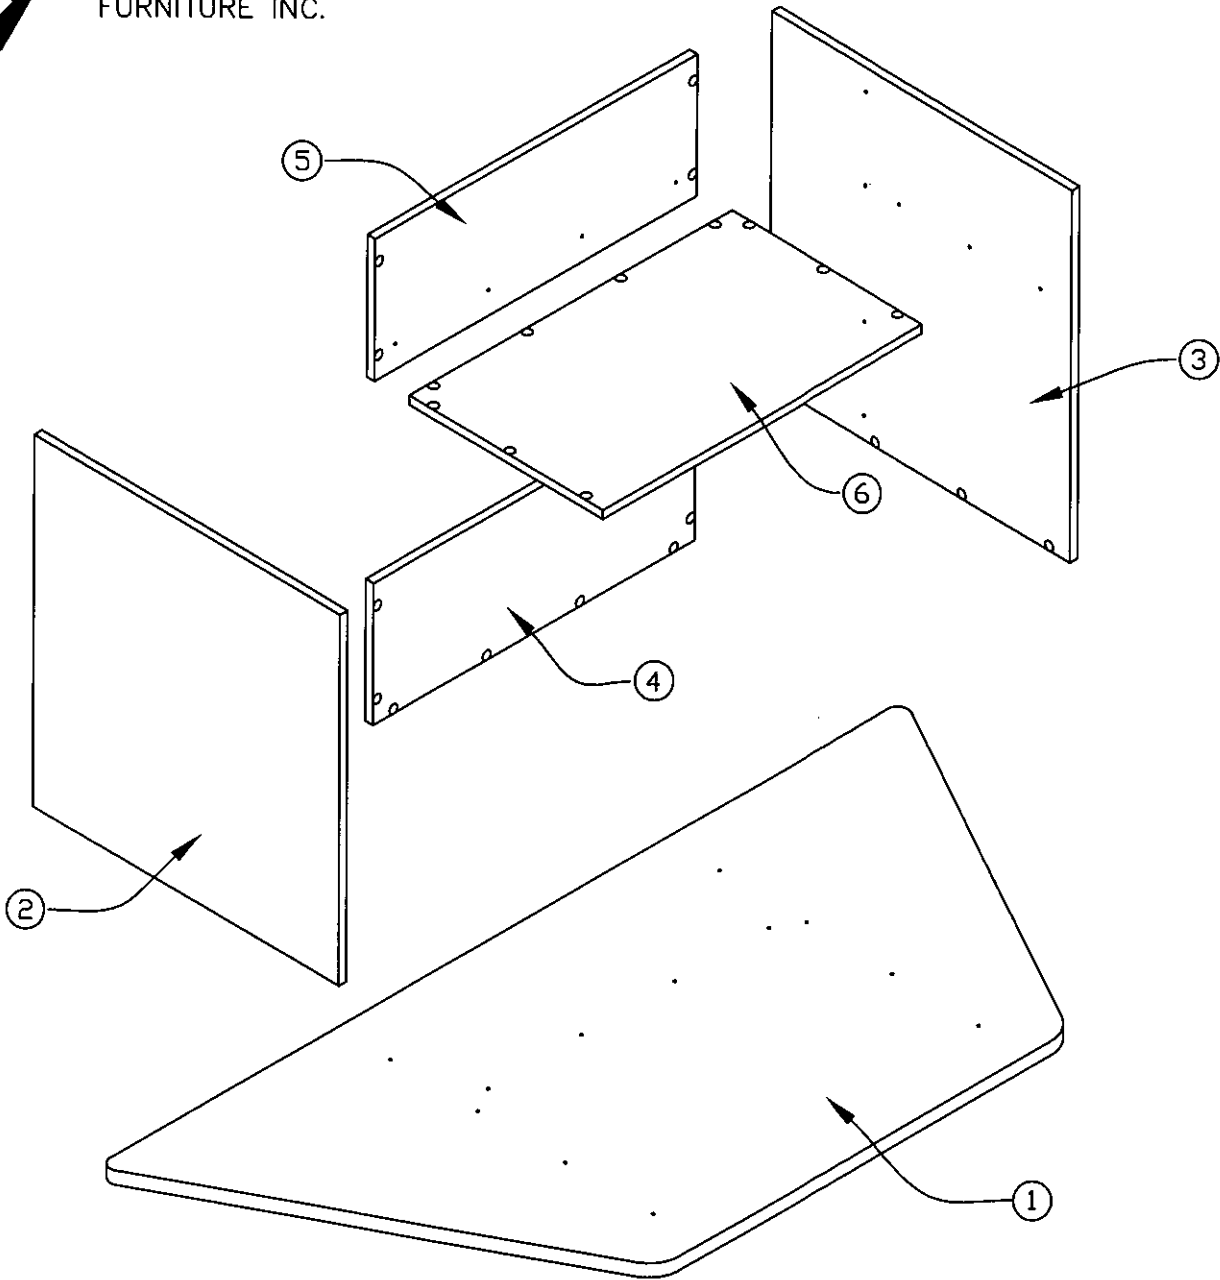

ASSEMBLY INSTRUCTION FOR 32-RC AND 39-RC


ITEM	DESCRIPTION	QTY.
1	TOP	1
2	LEFT END	1
3	RIGHT END	1
4	UPPER BACK	1
5	LOWER BACK	1
6	SHELF	1
		2

HARDWARE LIST



		QTY
		32-RC
		39-RC
	POSI-LOCK STUD	32
	GROMMET	1
 	WIRE CHANNEL 24"	1

1. LAY TOP (ITEM 1) ON A CLEAN SCRATCH FREE SURFACE AND INSTALL POSI LOCK STUDS INTO ALL PREDRILLED HOLES.
2. INSTALL POSI LOCK STUDS INTO ALL PREDRILLED HOLES IN ALL PIECES.
3. PLACE LEFT END (ITEM 2) ONTO POSI LOCK STUDS AND LOCK INTO PLACE SEE PAGE 3.
4. PLACE RIGHT END (ITEM 3) ONTO POSI LOCK STUDS AND LOCK INTO PLACE.
5. PLACE UPPER BACK (ITEM 4) ONTO POSI LOCK STUDS AND LOCK INTO PLACE.
6. PLACE LOWER BACK (ITEM 5) ONTO POSI LOCK STUDS AND LOCK INTO PLACE.
7. PLACE SHELF (ITEM 6) ONTO POSI LOCK STUDS AND LOCK INTO PLACE

CONNECTORS

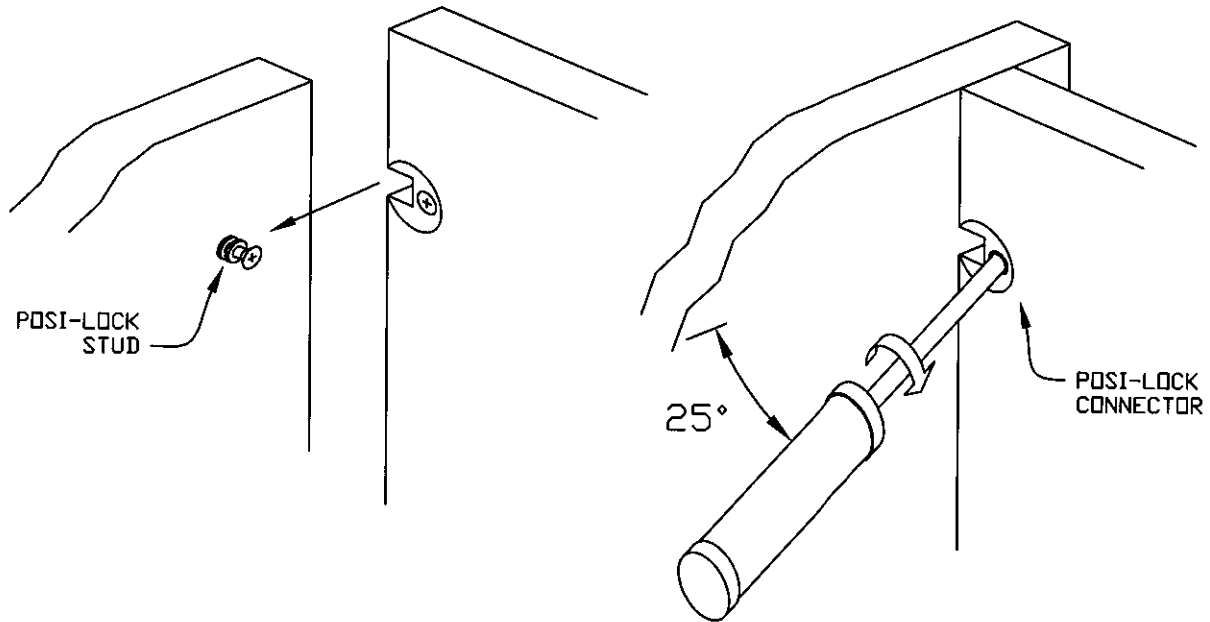

POSI-LOCK CONNECTORS

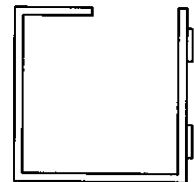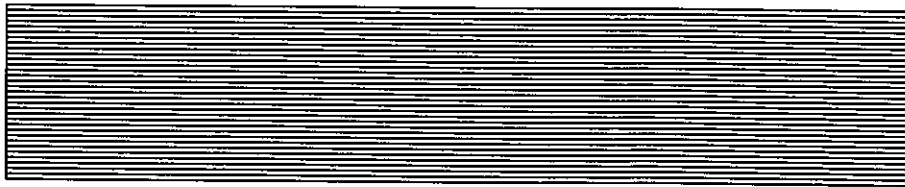

WIRE CHANNEL INSTALLS INSIDE CABINET ONTO BACK PANEL BETWEEN GROMMETS