

## ASSEMBLY INSTRUCTION FOR 32-CD AND 39-CD

ITEM	DESCRIPTION	QTY.
1	LEFT END	1
2	RIGHT END	1
3	TOP	1
4	SHELF/BOTTOM	2 (3 ON THE 39-CD)
5	BASE	1

# HARDWARE LIST

QTY


32-CD

39-CD


PAGE 2



POSI-LOCK STUD



ADJUSTABLE GLIDE



SLEEVE NUT



SLEEVE NUT BOLT



25

4

4


4

## STEP 1

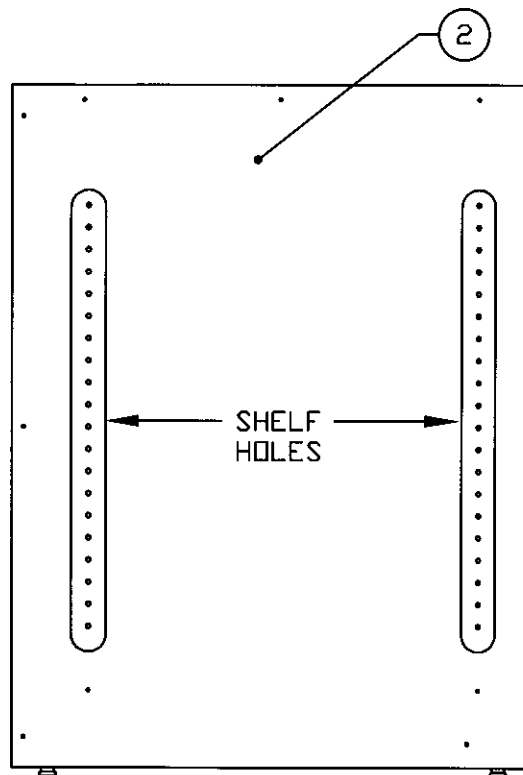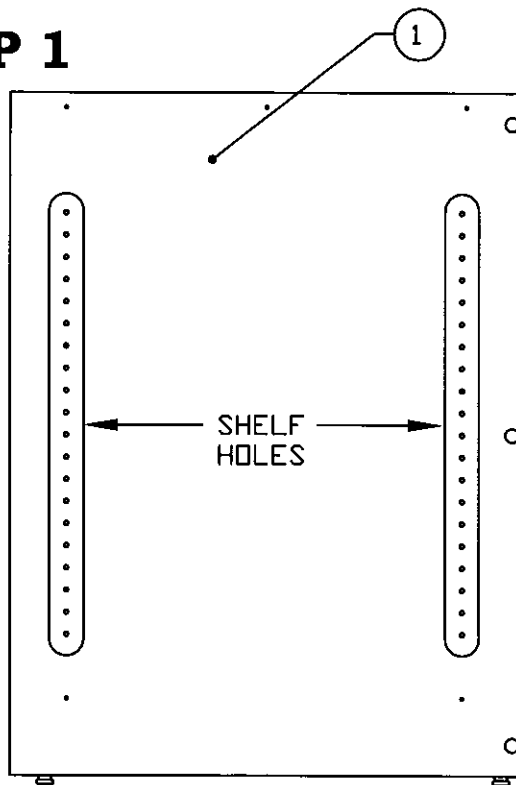

INSTALL POSI LOCK STUDS IN HOLES EXCEPT WHERE NOTED, ALSO SELECT DESIRED LOCATION FOR SHELF(S) AND INSTALL POSI LOCK STUDS IN DESIRED HOLES.


## STEP 2

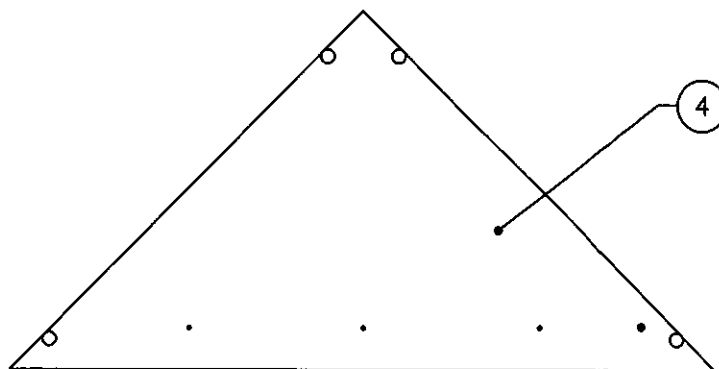

INSTALL POSI LOCK STUDS IN ONE OF THE SHELF/BOTTOM (ITEM 4) THIS WILL BE THE BOTTOM

## STEP 4

PAGE 3

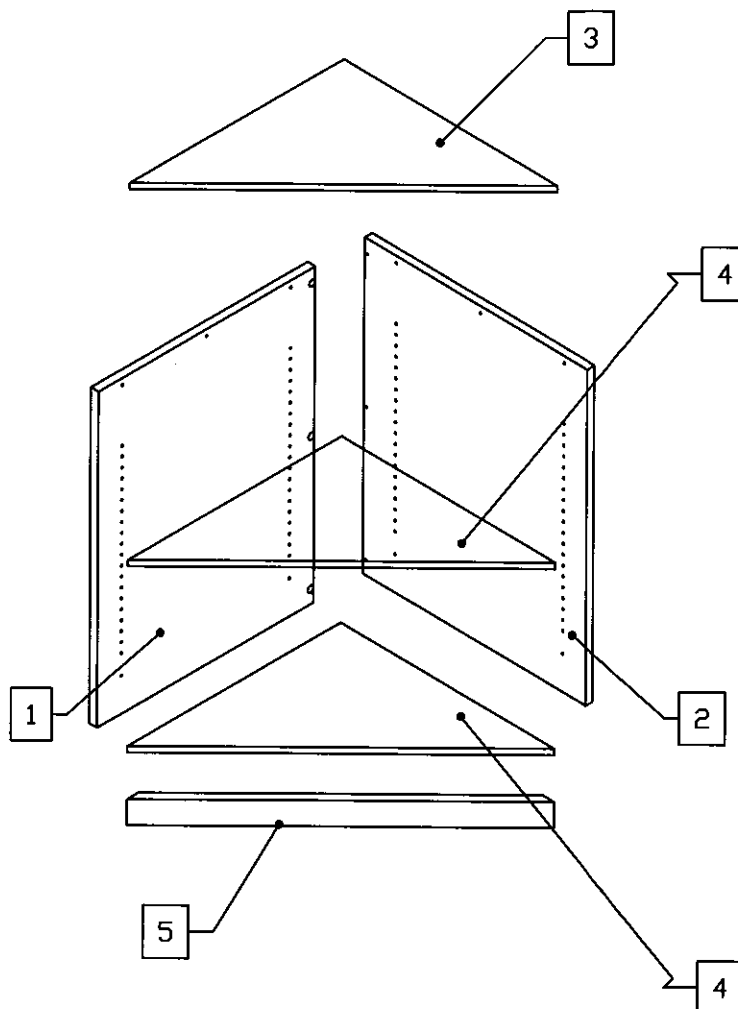

1. WITH 2 PEOPLE ATTACH THE LEFT AND RIGHT END PANELS (ITEM 1 & 2) INTO PLACE USING THE POSI LOCK CONNECTORS (SEE PAGE 4).
2. INSTALL THE TOP (ITEM 3) AND LOCK INTO PLACE.
3. INSTALL THE BOTTOM AND SHELVES (ITEM 4)
4. TURN UNIT OVER AND INSTALL THE BASE (ITEM 5) BY LOCKING INTO PLASE WITH POSI-LOCKS AND SCREW IN THE 4 ADJUSTABLE GLIDES.

SHOULD YOU NEED ASSISTANCE CALL YOUR DEALER OR PARAGON AT  
1-800-451-8546

# CONNECTORS

