


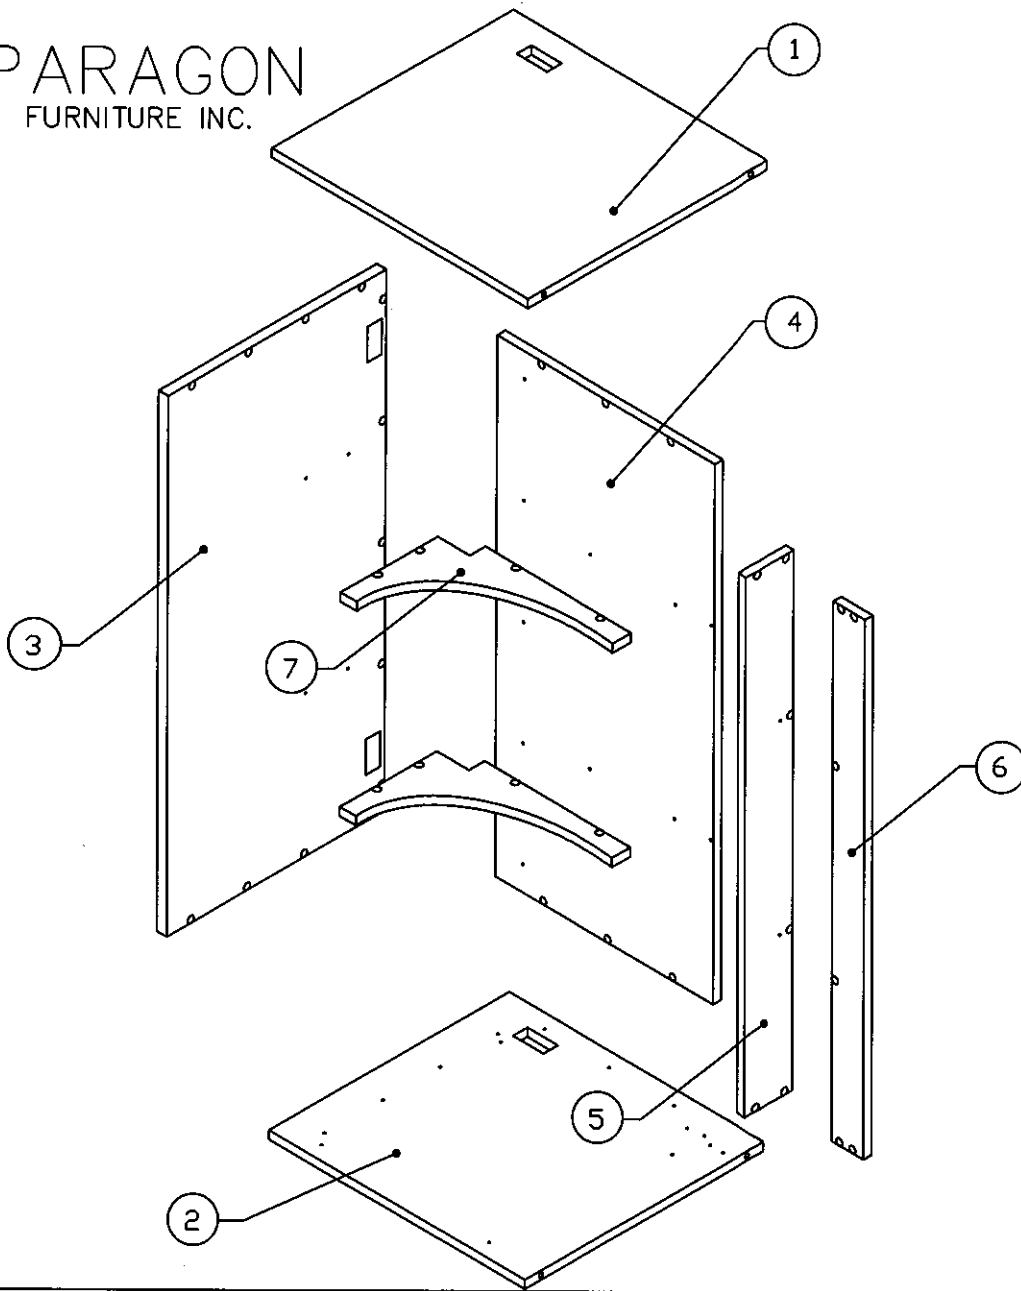

PARAGON
FURNITURE INC.


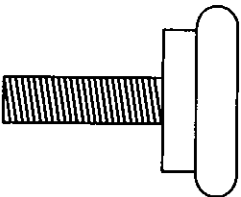


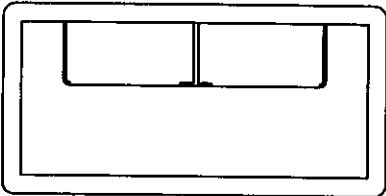


PAGE 1



ASSEMBLY INSTRUCTION FOR 3236-DS,3248-DS,3260-DS,3272-DS


ITEM	DESCRIPTION	QTY.
1	RIGHT END	1
2	LEFT END	1
3	TOP	1
4	BACK PANEL	1
5	SHELF	1
6	ACCENT BASE	1
7	GUSSET	2 GUSSET ONLY ON 60" AND 72" DESK

HARDWARE LIST

		<u>QTY</u>			
		3236-DS	3248-DS	3260-DS	3272-DS
	POSI-LOCK STUD	27	27	39	39
	ADJUSTABLE GLIDE	4	4	4	4
	SLEEVE NUT	4	4	4	4
	SLEEVE NUT BOLT	4	4	4	4
	GROMMET	4	4	4	4
		1	1	1	1
WIRE CHANNEL 24"					


STEP 1

PAGE 3

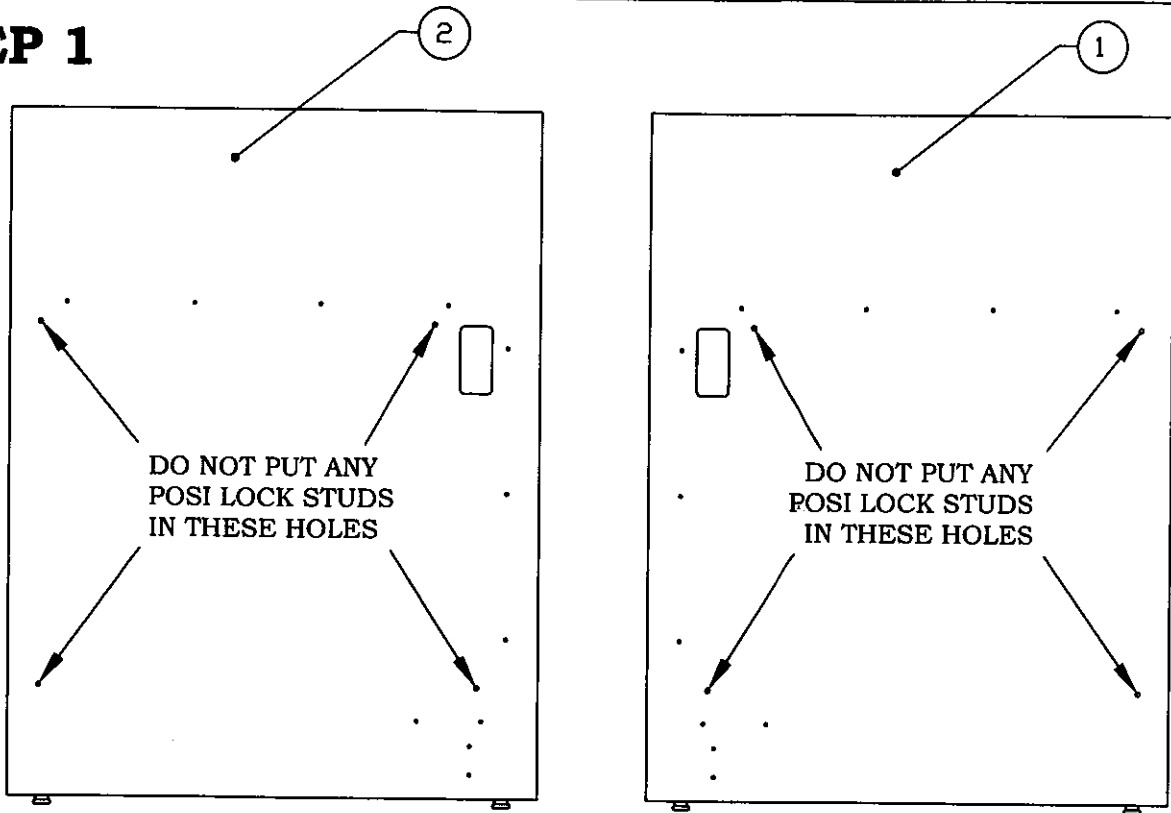


LAY END PANELS (ITEM 1 & 2) ON A CLEAN SCRATCH FREE SURFACE AND INSTALL POSI LOCK STUDS IN ALL THE HOLES EXCEPT WHERE NOTED IN DRAWING ABOVE.

STEP 2

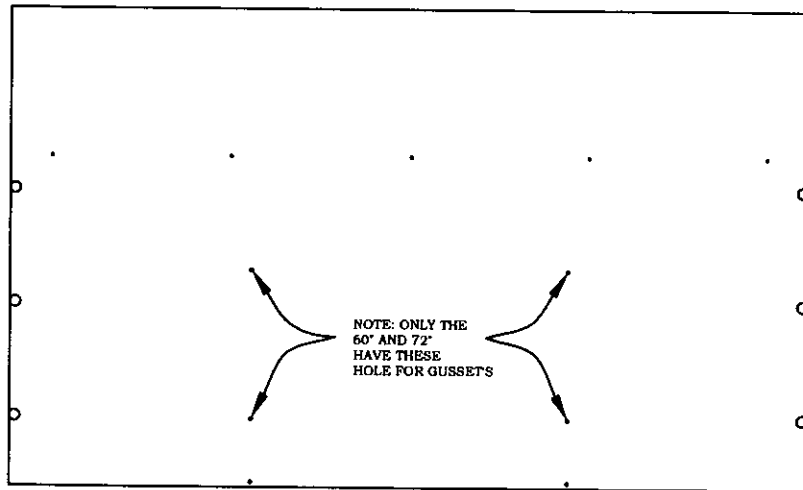


LAY BACK PANEL (ITEM 4) ON A CLEAN SCRATCH FREE SURFACE AND INSTALL POSI LOCK STUDS IN ALL THE HOLES.

STEP 3

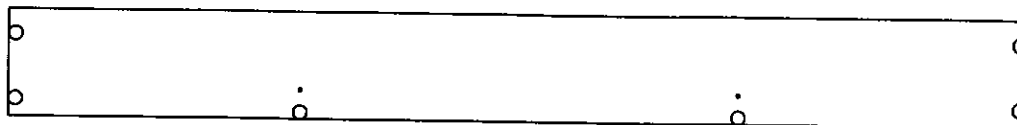


LAY SHELF (ITEM 5) ON A CLEAN SCRATCH FREE SURFACE AND INSTALL POSI LOCK STUDS IN ALL THE HOLES.

STEP 4

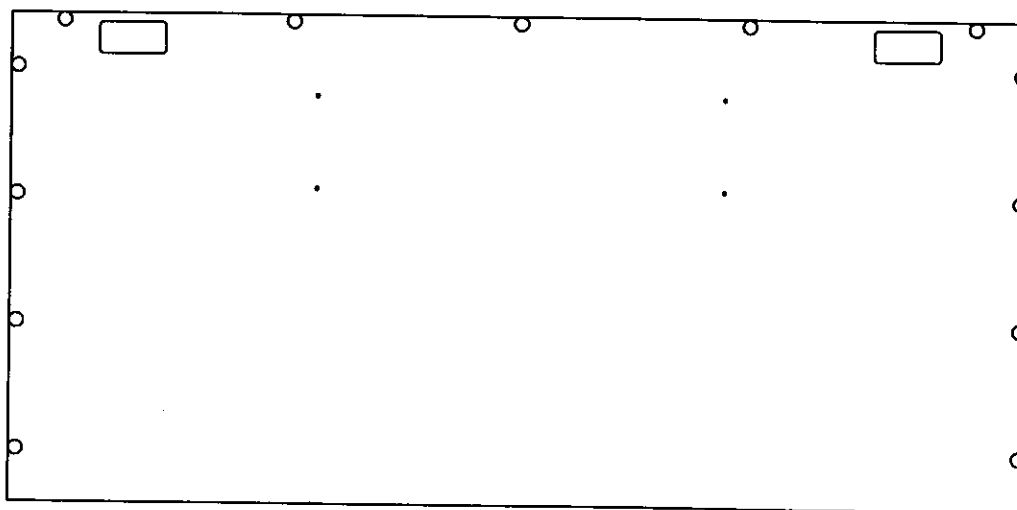




LAY TOP (ITEM 3) ON A CLEAN SCRATCH FREE SURFACE AND INSTALL POSI LOCK STUDS IN ALL THE HOLES.

NOTE: THIS STEP ONLY APPLIES TO THE 60" AND 72" DESK SHELL.

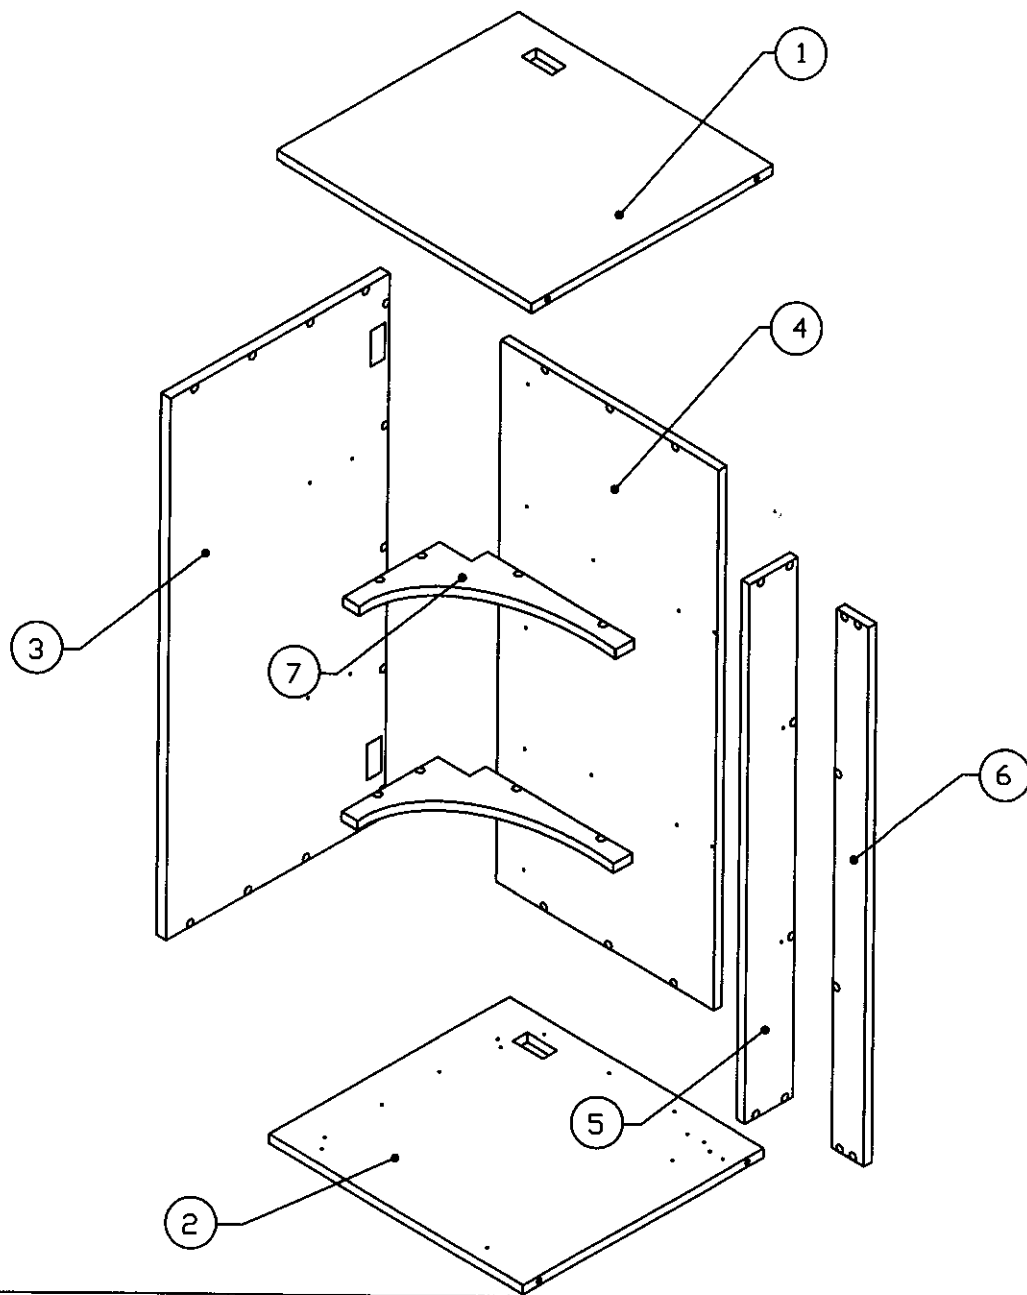

1. LAY LEFT END PANEL (ITEM 2) ON A CLEAN SCRATCH FREE SURFACE.
2. WITH 2 PEOPLE INSTALL BACK PANEL (ITEM 4) BY SLIDING ONTO POSI LOCK STUD AND LOCKING INTO PLACE (SEE PAGE 7).
3. NEXT INSTALL THE SHELF (ITEM 5), BASE (ITEM 6), AND TOP (ITEM 3) LOCK INTO PLACE.
4. PLACE RIGHT END PANEL ON TOP AND LOCK INTO PLACE.
5. INSTALL LEVELING GLIDES INTO BOTTOM OF END PANELS.
6. ON 60" AND 72" DESK INSTALL THE GUSSETS (ITEM 7).
7. TURN DESK UPRIGHT INSTALL 4 GROMMETS.

SHOULD YOU NEED ASSISTANCE CALL YOUR DEALER OR PARAGON AT
1-800-451-8546

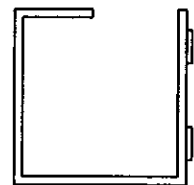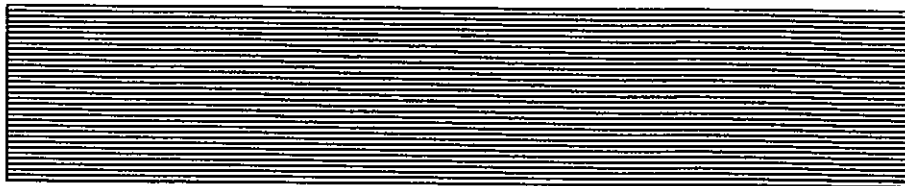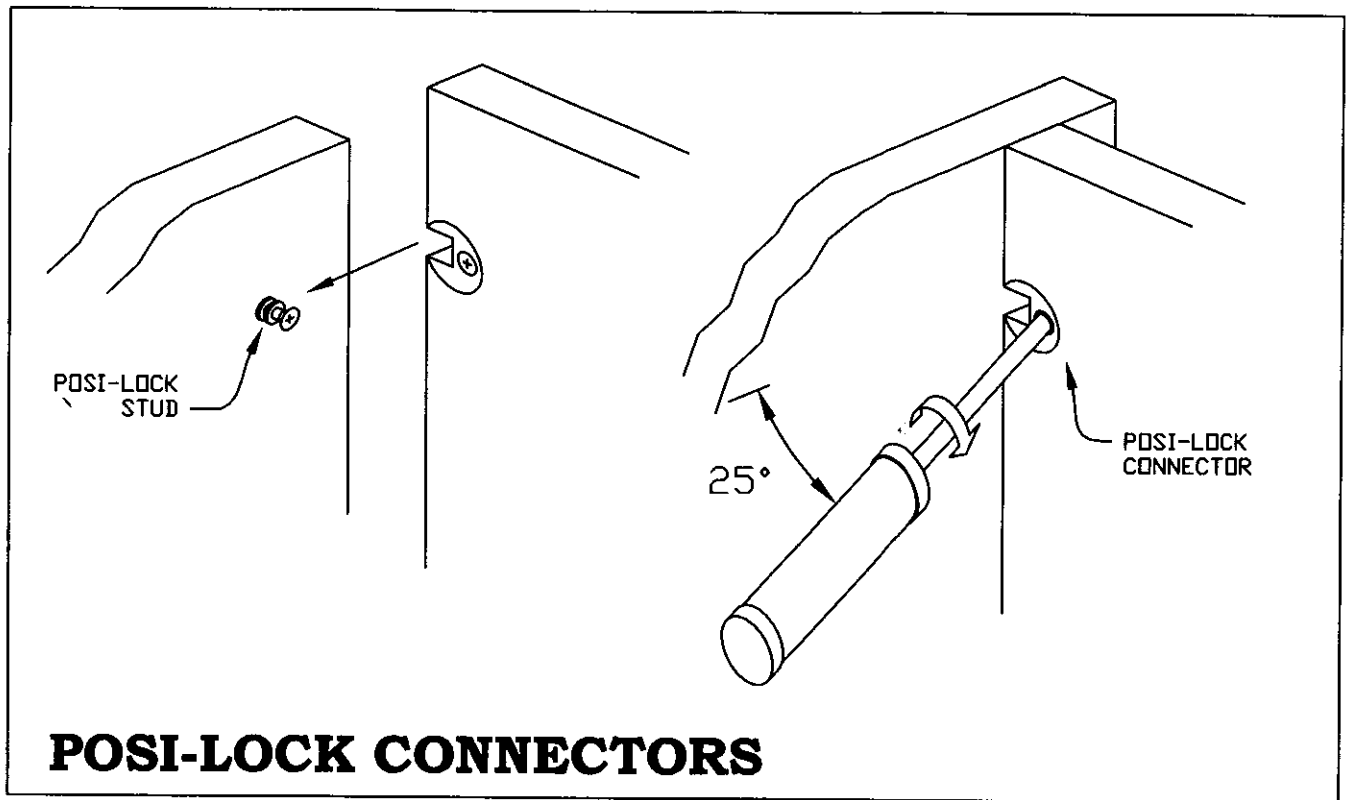

WIRE CHANNEL INSTALLS INSIDE CABINET ONTO BACK PANEL BETWEEN GROMMETS