
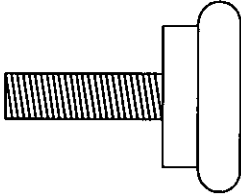
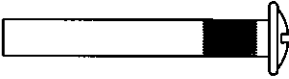







ASSEMBLY INSTRUCTION FOR 32-WC AND 39-WC

ITEM	DESCRIPTION	QTY.
1	TOP	1
2	BACK	1
3	SMALL RIGHT END	1
4	RIGHT END	1
5	LEFT END	1
6	SMALL LEFT END	1
7	BLACK METAL CONNECTING BRACKET	2


HARDWARE LIST

PAGE 2

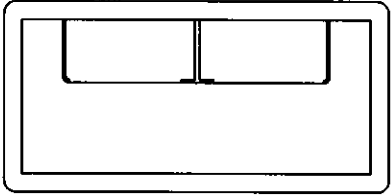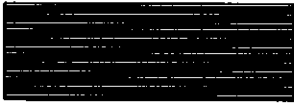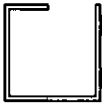
		QTY
		32-WC
		39-WC
	POSI-LOCK STUD	19
	ADJUSTABLE GLIDE	6
	SLEEVE NUT	4
	SLEEVE NUT BOLT	4
	#8 X 5/8"	16
	GROMMET	4
	 WIRE CHANNEL 24"	1

STEP 1

PAGE 3

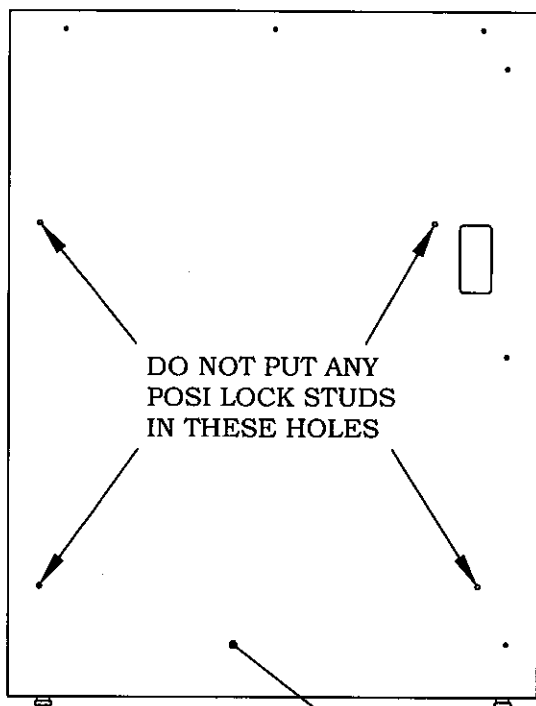


5

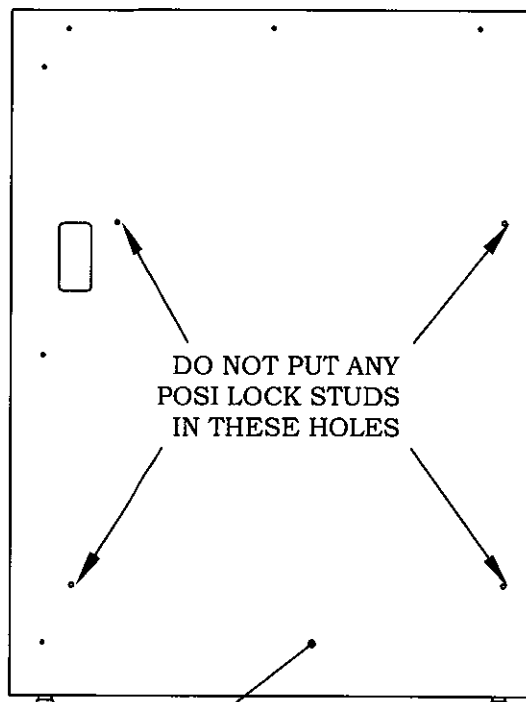

4

INSTALL POSI LOCK STUDS IN HOLES EXCEPT WHERE NOTED.

STEP 2

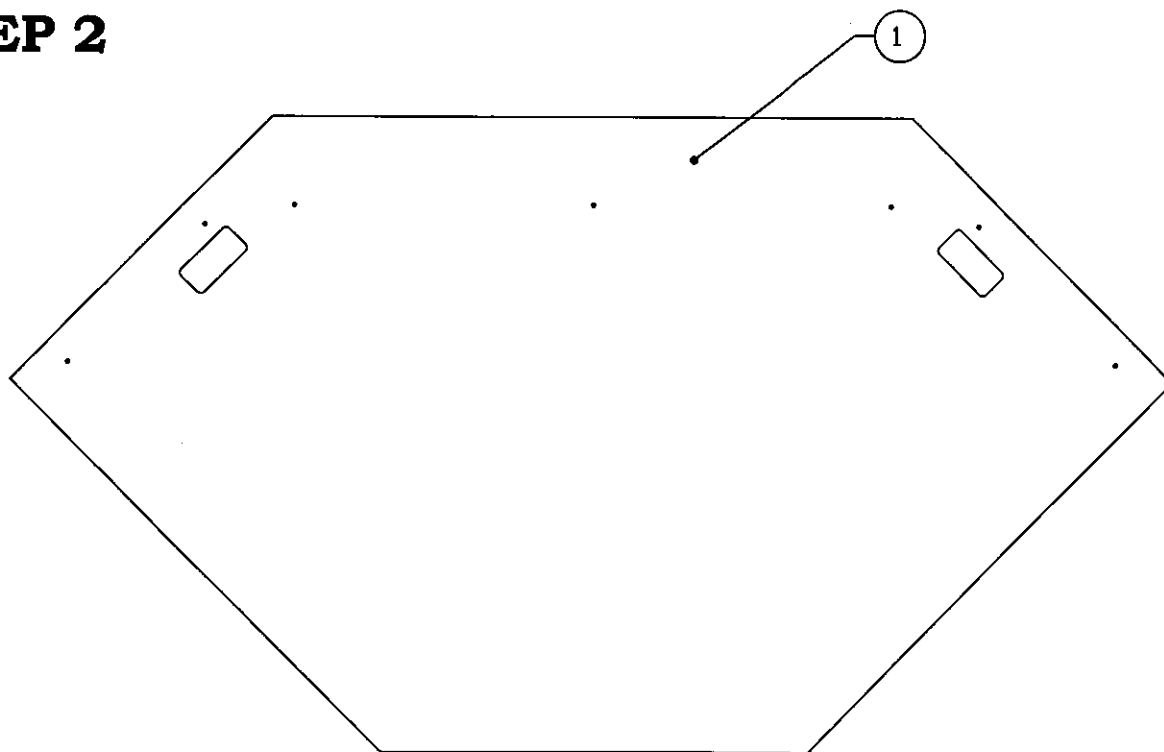


1

INSTALL POSI LOCK STUDS IN ALL HOLES .


STEP 3

PAGE 4

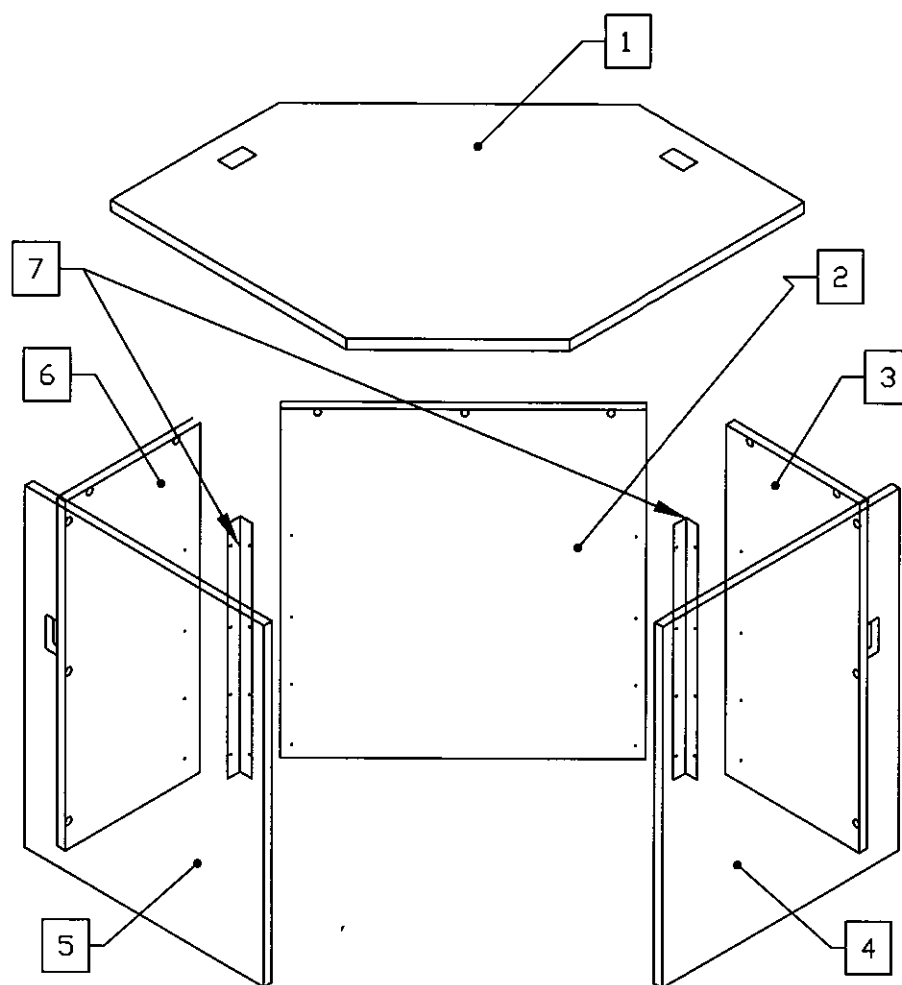




1. STARTING FROM LEFT TO RIGHT WITH 2 PEOPLE ATTACH LEFT END (ITEM #5) TO SMALL LEFT END (ITEM #6) BY SLIDING ONTO POSI LOCK STUDS AND LOCKING INTO PLACE (SEE PAGE)
2. SCREW METAL CONNECTING BRACKET ONTO SMALL LEFT END PANEL WITH 4 #8 X 5/8" SCREWS.
3. SCREW BACK PANEL (ITEM# 2) TO SMALL LEFT END WITH #8 X 5/8 PAN HEAD SCREWS
4. SCREW METAL CONNECTING BRACKET ONTO SMALL RIGHT END PANEL WITH 4 #8 X 5/8" SCREWS.
5. SCREW BACK PANEL (ITEM# 2) TO SMALL RIGHT END WITH #8 X 5/8 PAN HEAD SCREWS.
6. PLACE TOP (ITEM# 1) ON TOP OF BASE UNIT LOCK INTO PLACE.
7. INSTALL GROMMETS AND WIRE CHANNEL

OPTIONAL

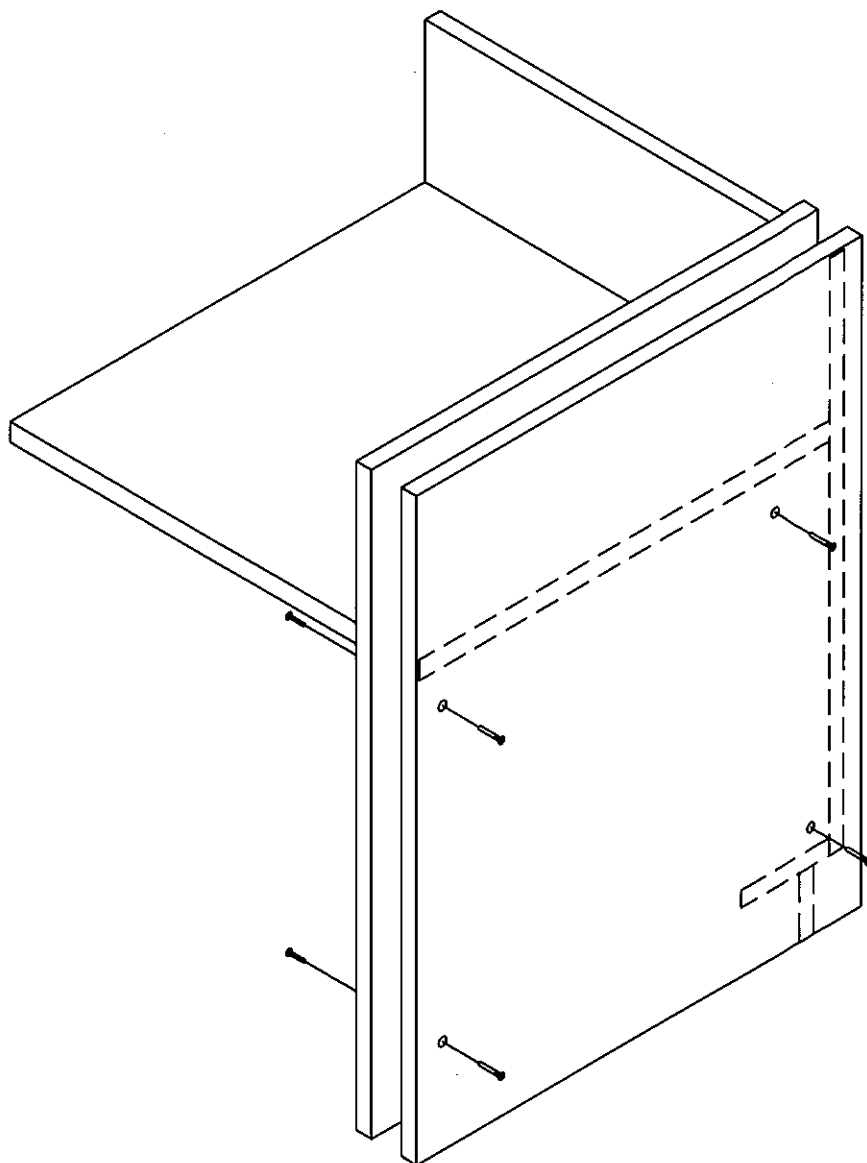

CIRCULATION DESK PIECES CAN BE CONNECTED TOGETHER.

- 1.LEVEL ALL PIECES TO BE CONNECTED.
- 2.THEN USING A $13/64$ " DRILL BIT DRILL THROUGH THE 4 PRE-DRILLED HOLES THAT WERE NOT USED ON PAGE 3.
- 3.INSTALL SLEEVE NUT AND BOLT AND TIGHTEN.

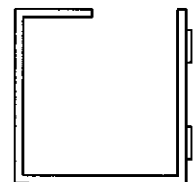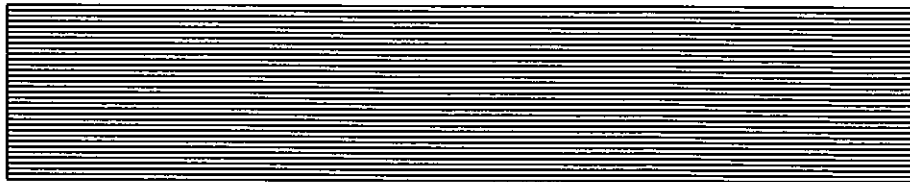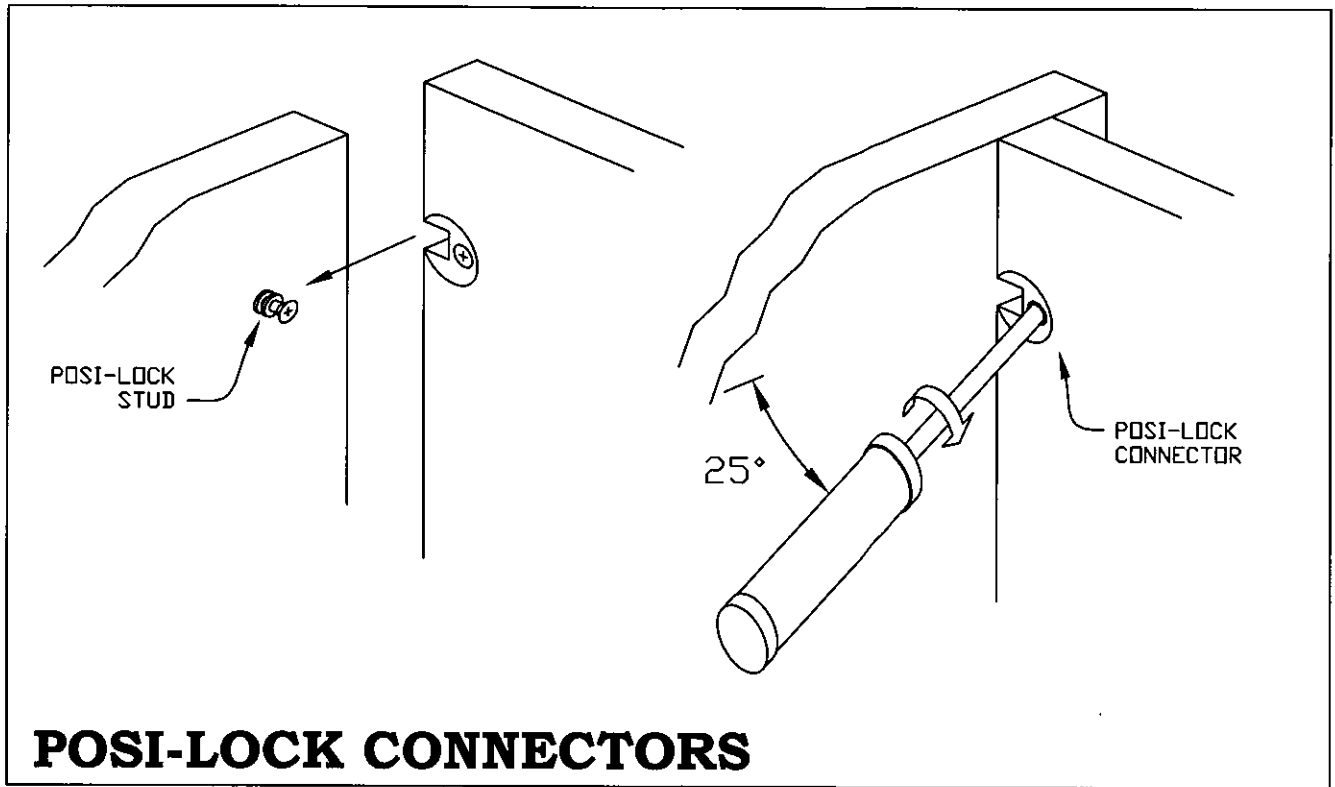

WIRE CHANNEL INSTALLS INSIDE CABINET ONTO BACK PANEL BETWEEN GROMMETS