




PARAGON
FURNITURE INC.

PAGE 1

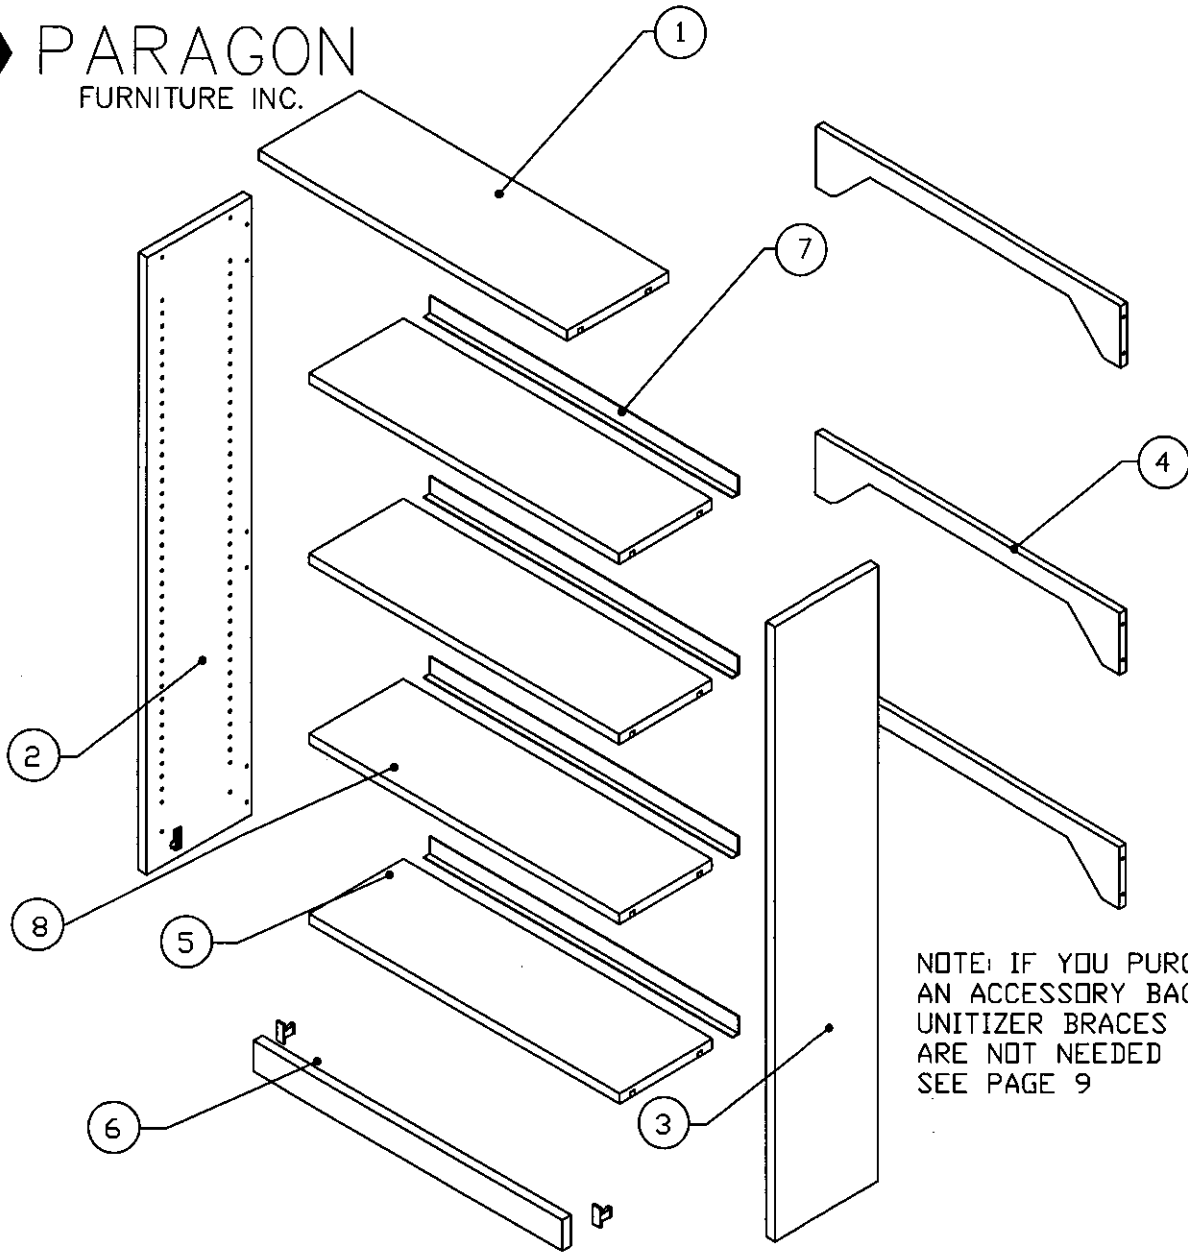


NOTE: IF YOU PURCHASED
AN ACCESSORY BACK THE
UNITIZER BRACES ITEM#4
ARE NOT NEEDED
SEE PAGE 9

STEEL SHELVING

ASSEMBLY INSTRUCTION FOR 42-SFS,48-SFS,60-SFS,72-SFS,84-SFS

ITEM	DESCRIPTION	9001011	9001011	9001046	9001111	9001131
		42-SFS	48-SFS	60-SFS	72-SFS	84-SFS
1	TOP	1	1	1	1	1
2	LEFT END	1	1	1	1	1
3	RIGHT END	1	1	1	1	1
4	UNITIZER BRACES	2	2	3	3	3
5	BOTTOM SHELF	1	1	1	1	1
6	ACCENT BASE	1	1	1	1	1
7	DEFLECTASTOP	1	1	1	1	1
8	STEEL SHELVES	2	2	3	4	5


HARDWARE LIST

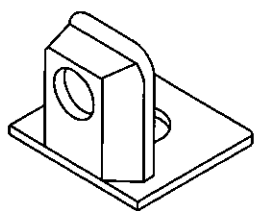

SCREW-IN TOP AND
BOTTOM CONNECTOR
(1010582)



SHELF PINS
(10105881)




1/4" x 1/2"
ATTACHING SCREW
(1010585)




#8 x 3/4" FLAT
HEAD SCREW
(1010589)



#8 X 5/8 BLACK
PAN HEAD SCREW
(1010543)

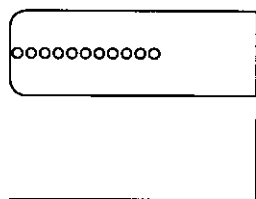


WALL ATTACHING
BRACKET
(2281000)

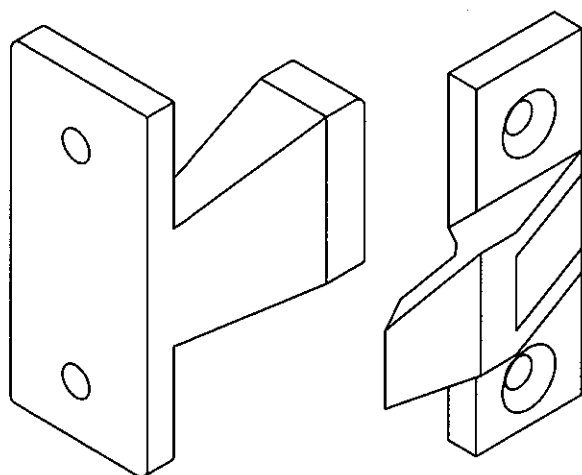

ACCENT BASE CONNECTORS
(1010584)


QTY				
42-SFS	48-SFS	60-SFS	72-SFS	84-SFS
8	8	8	8	8
8	8	12	16	20
26	26	34	34	34
4	4	4	4	4
		2	2	2
		1	1	1
2	2	2	2	2

NOTICE: WHEN INSTALLING STARTER AND ADDERS BE SURE TO LEVEL UNITS DURING INSTALLATION TO PREVENT DAMAGE TO THE SHELVING.

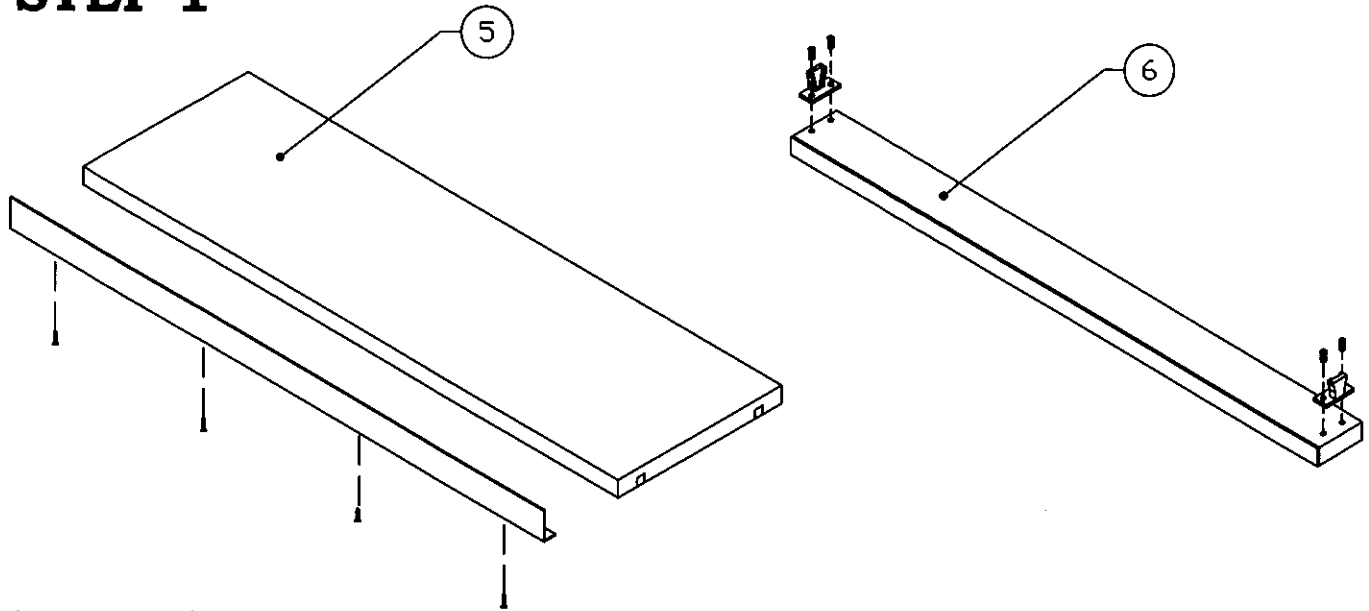STEP 1


USING #8 X 3/4" FLAT HEAD SCREWS ASSEMBLE DEFLECTA-STOP TO BOTTOM L SHIELD (ITEM 5).

USING 1/4" X 1/2" ATTACHING SCREWS ASSEMBLE FEMALE ACCENT BASE CONNECTORS TO ACCENT BASE (ITEM 6).

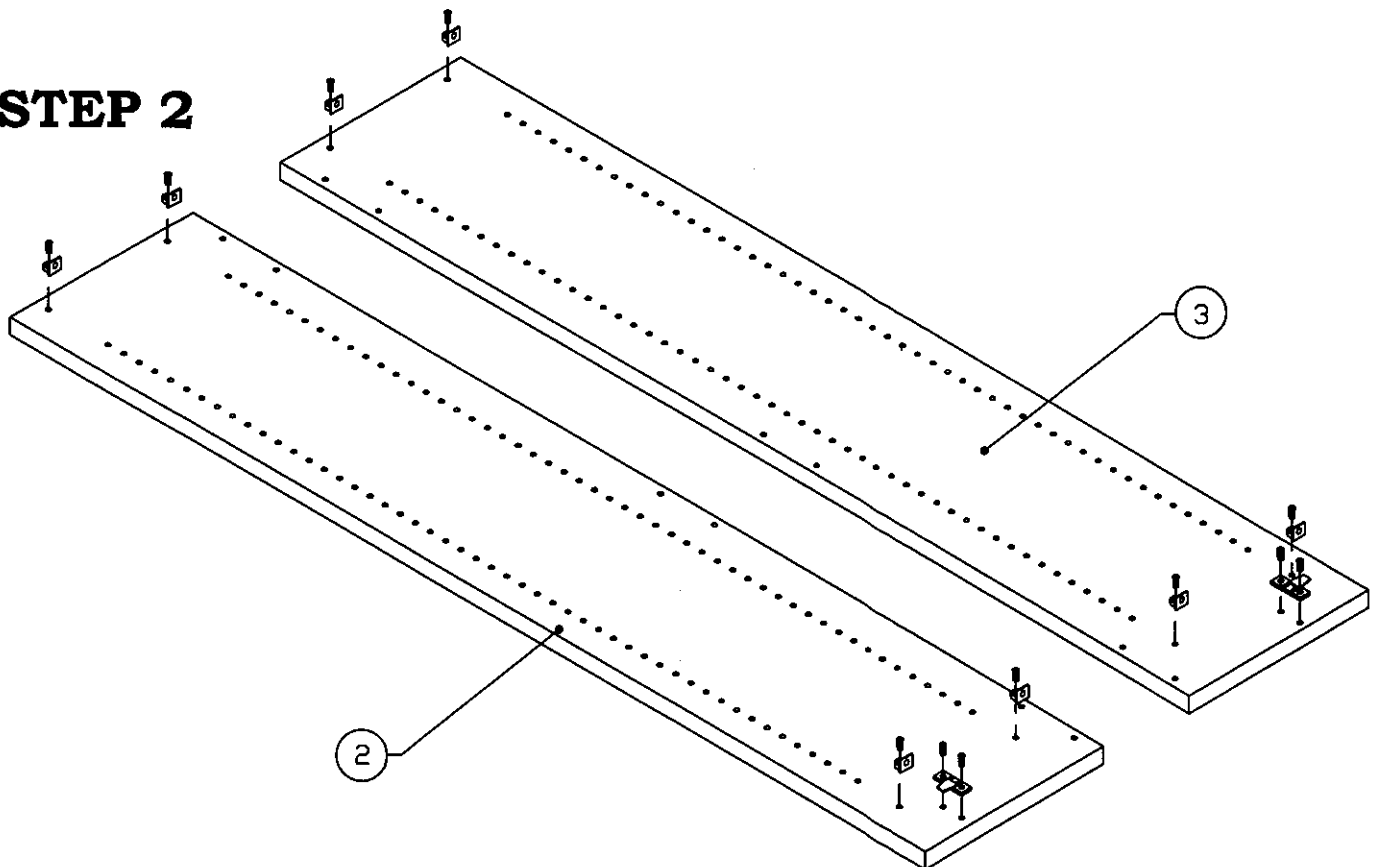STEP 2

LAY END PANELS ON A CLEAN SCRATCH FREE SURFACE AND INSTALL THE SCREW-IN CONNECTORS AND MALE BASE CONNECTORS USING 1/4" X 1/2" ATTACHING SCREWS


STEP 3

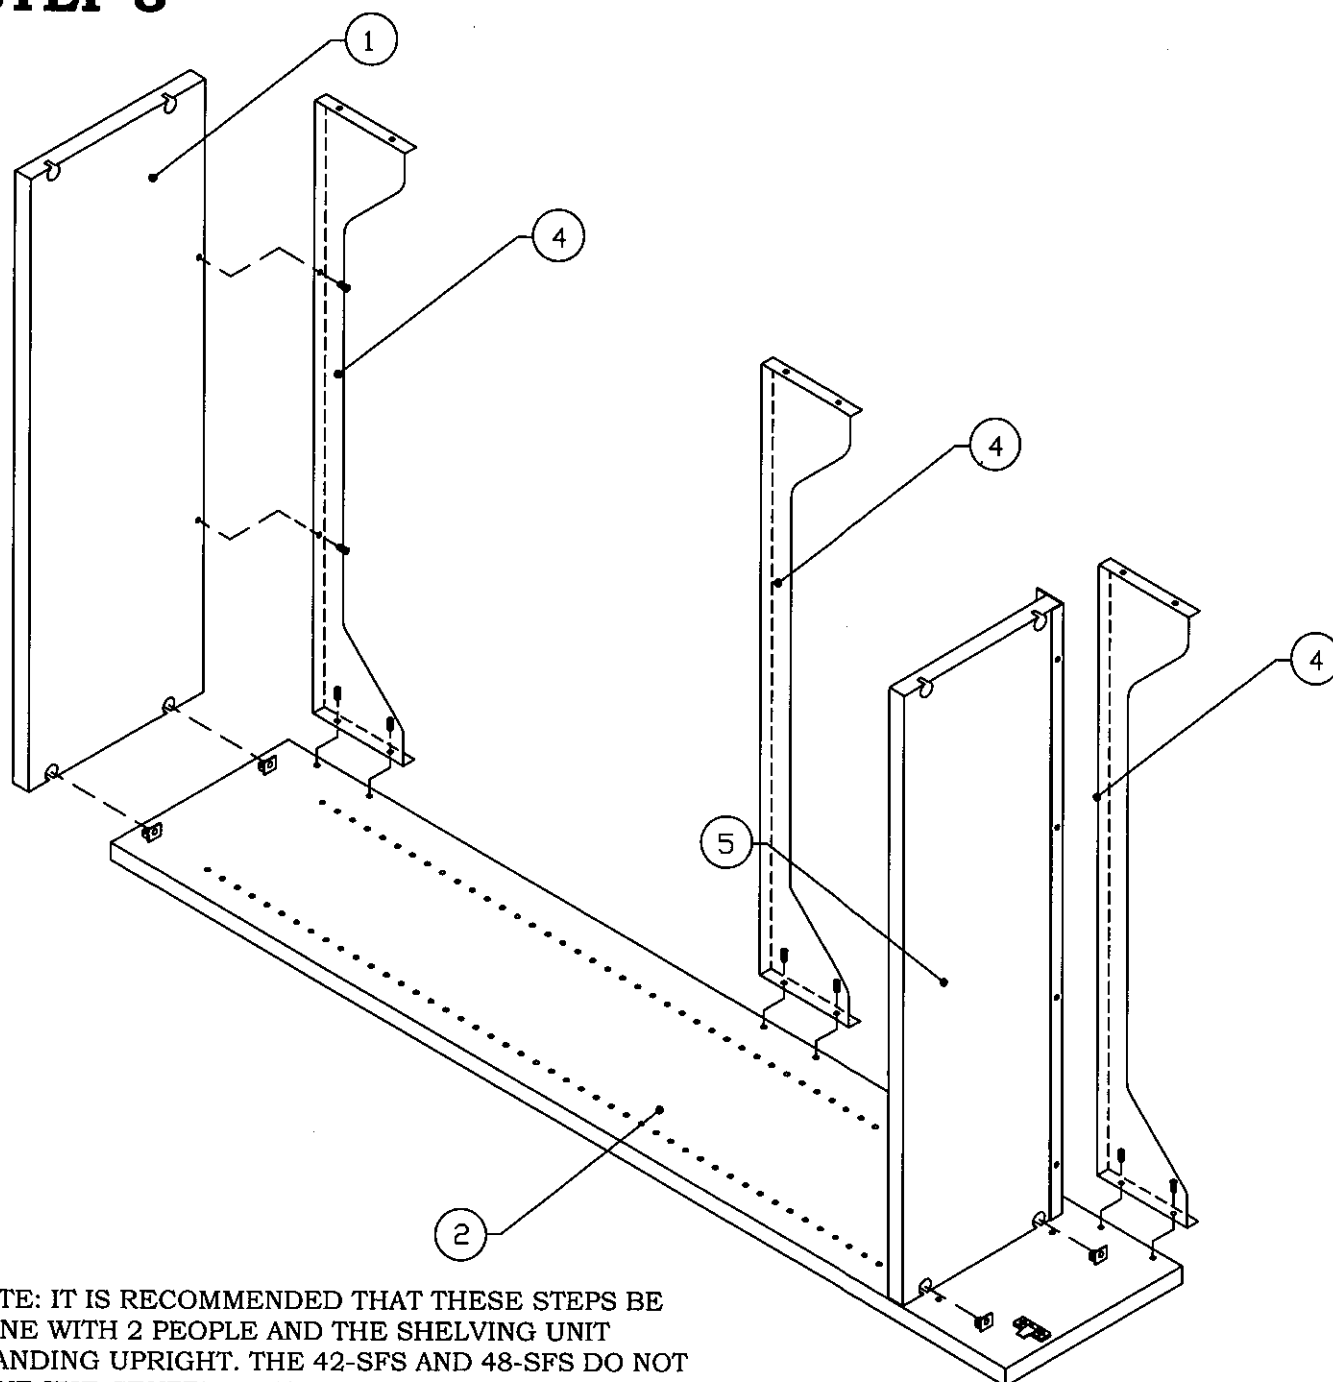

NOTE: IT IS RECOMMENDED THAT THESE STEPS BE DONE WITH 2 PEOPLE AND THE SHELVING UNIT STANDING UPRIGHT. THE 42-SFS AND 48-SFS DO NOT HAVE THE CENTER UNITIZER BRACE.


INSTALL UNITIZER BRACES (ITEM 4) WITH $1/4"$ X $1/2"$ ATTACHING SCREWS BE SURE THAT SCREWS ARE TOWARDS THE BACK OF THE SHELVING UNIT

NEXT INSTALL TOP (ITEM 1),AND BOTTOM SHELF (ITEM 5) BY TAPPING ONTO THE CONNECTORS AND LOCKING THEM INTO PLACE BY TURNING SCREW IN CONNECTORS $1/2$ TURN CLOCKWISE.

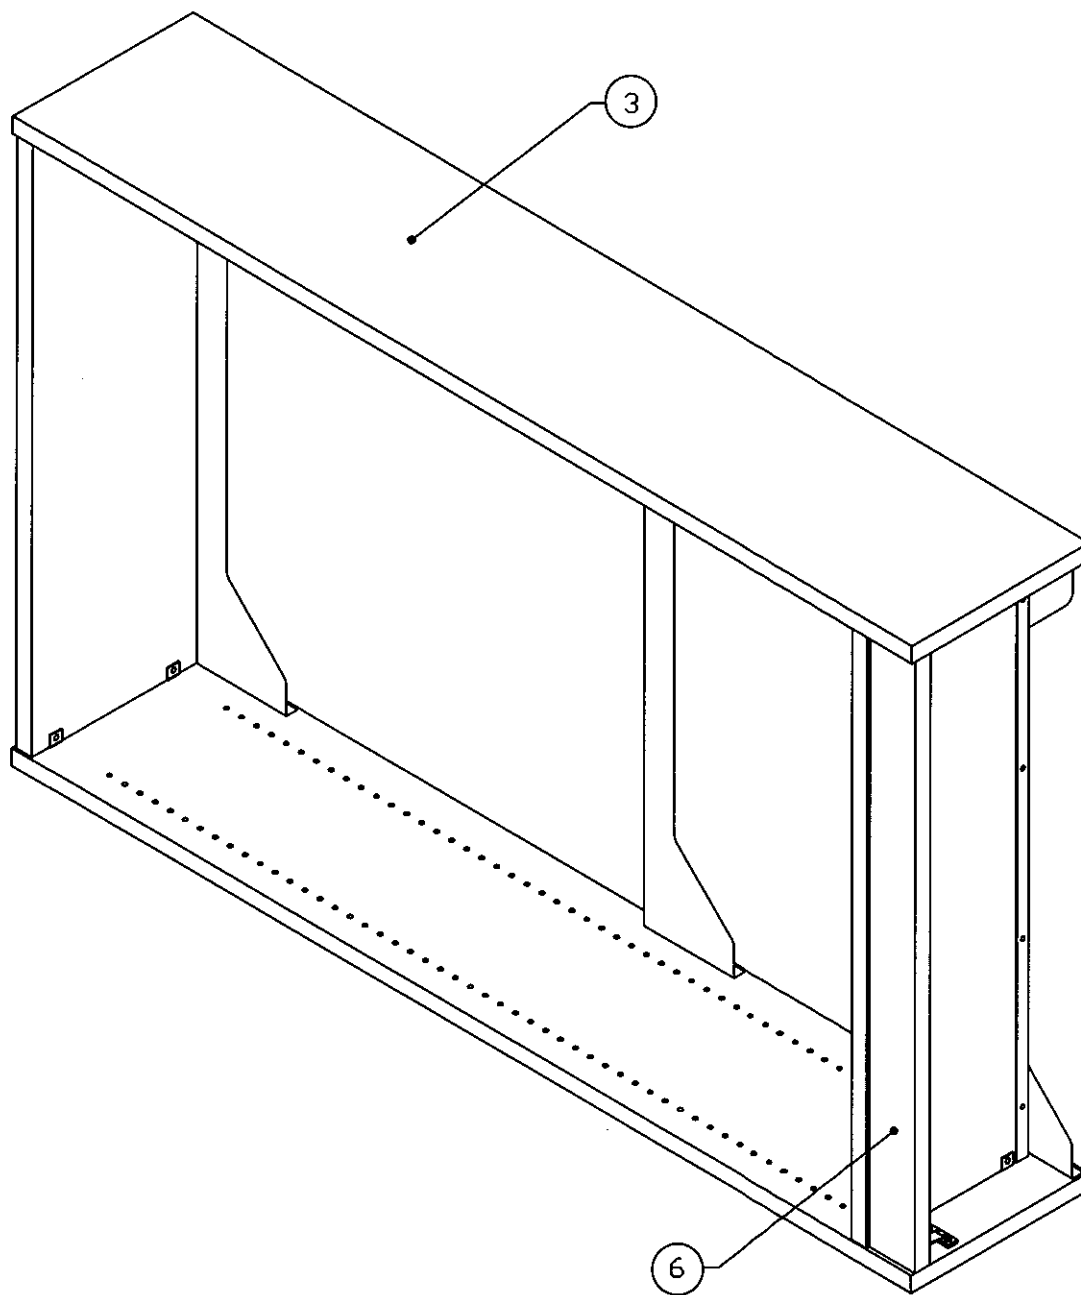STEP 4

INSTALL RIGHT END (ITEM 3) WITH THE SAME METHODS USED TO INSTALL LEFT END.

INSTALL ACCENT BASE (ITEM 6) BY TAPPING INTO PLACE.

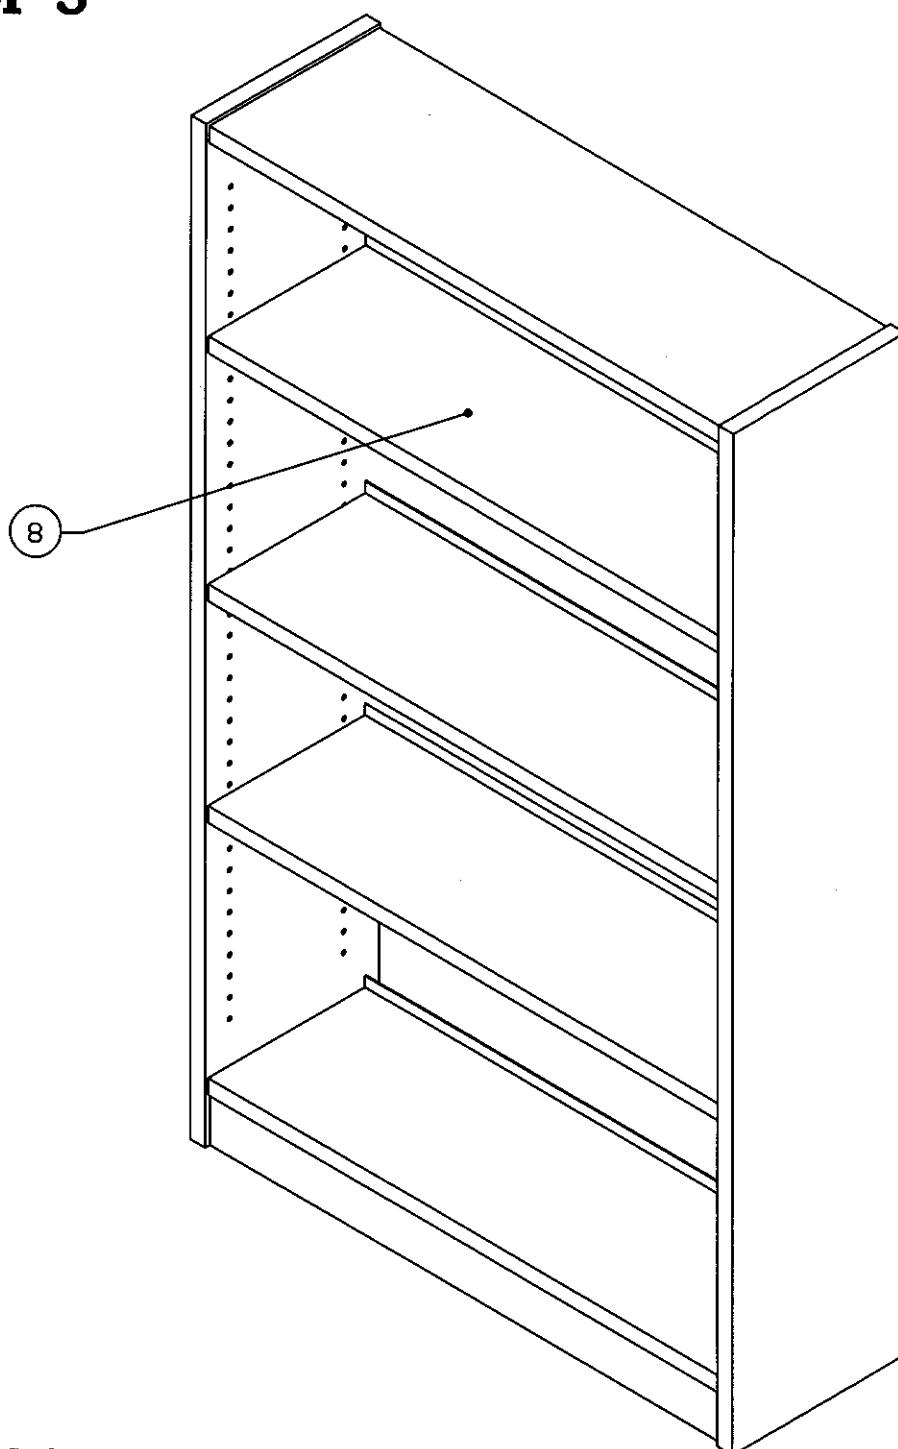STEP 5

INSTALL SHELVES IN DESIRED LOCATION AND LOCK INTO PLACE

RECOMMENDED SHELF SPACING FROM THE BOTTOM UP

42-SFS PIN IN THE 9 AND 19 HOLES

48-SFS PIN IN THE 10 AND 22 HOLES


60-SFS PIN IN THE 10 , 21 AND 32 HOLES

72-SFS PIN IN THE 10 , 21 , 32 AND 42 HOLES


84-SFS PIN IN THE 10 , 21 , 32 , 42 AND 52 HOLES

NOTE: WE RECOMMEND INSTALLING ALL THE SHELF PINS BEFORE THE SHELVES. ON THE 60", 72" AND 84" THE CENTER SHELF SHOULD BE SCREWED IN USING 4, 1/4 X 1/2 ATTACHING SCREWS.

SHOULD YOU NEED ASSISTANCE CALL YOUR DEALER OR PARAGON AT 1-800-451-8546

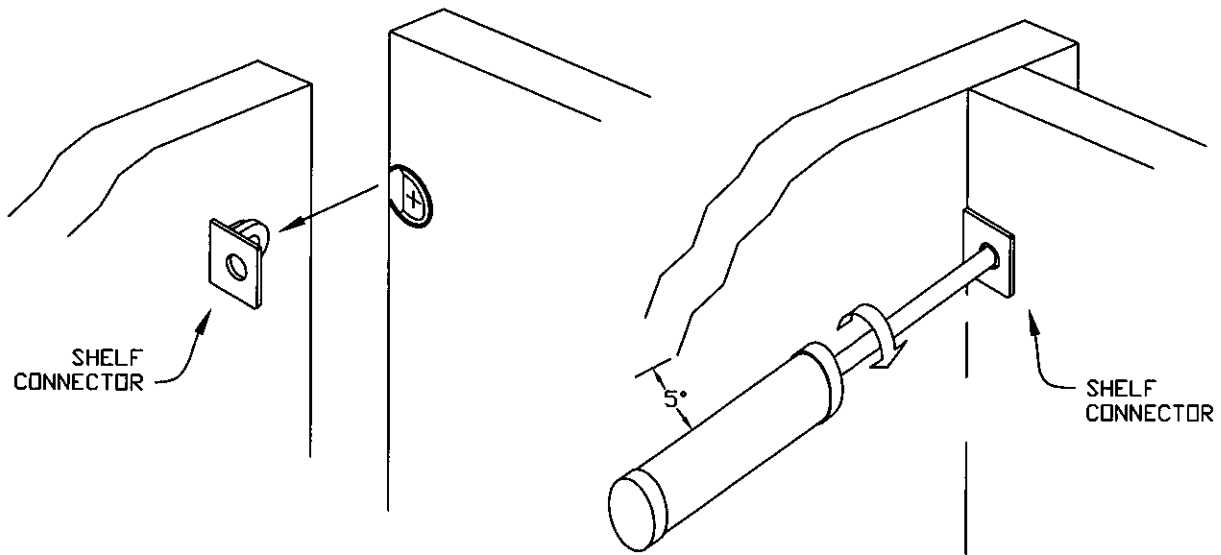


SHELF CONNECTORS

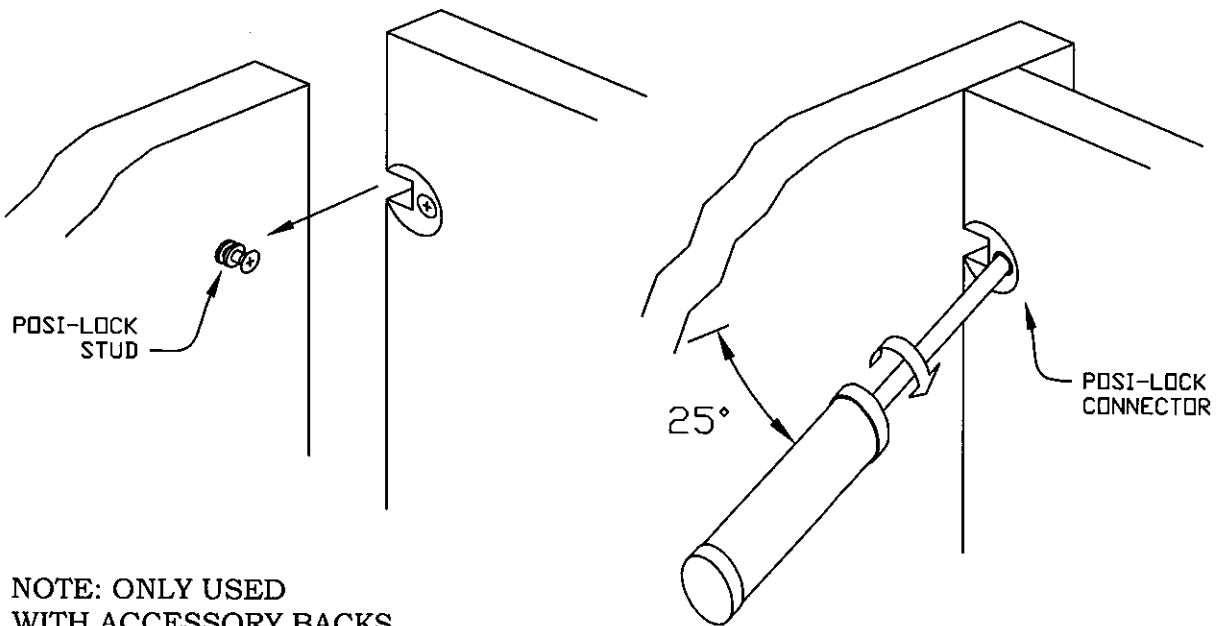

NOTE: ONLY USED
WITH ACCESSORY BACKS


POSI-LOCK CONNECTORS

**WALL MOUNTING INSTRUCTIONS FOR SHELVING
PARAGON REQUIRES ALL SINGLE FACED SHELVING
60" OR HIGHER TO BE ATTACHED TO WALL**

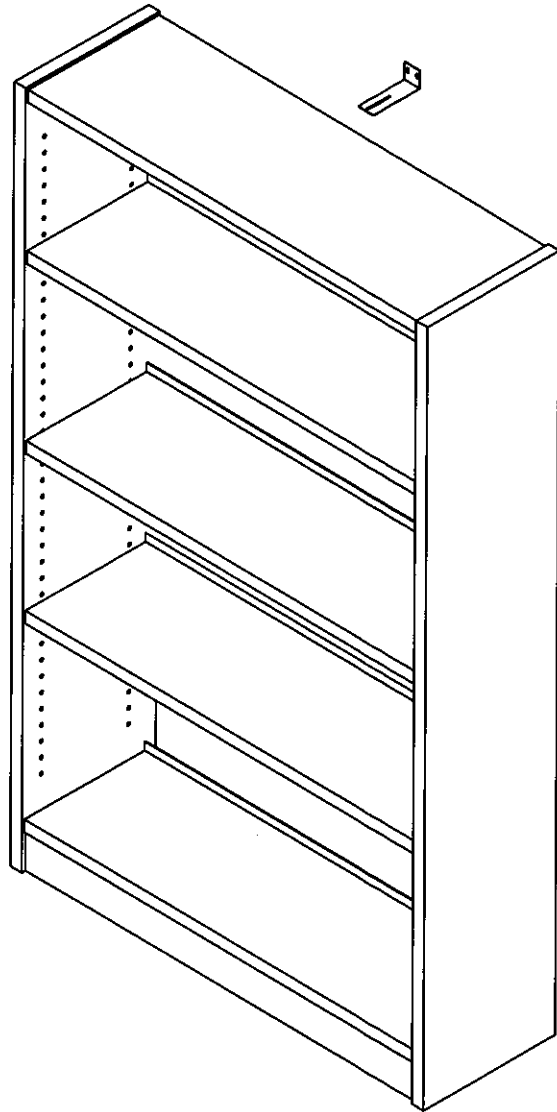

#8 X 5/8 BLACK
PAN HEAD SCREW

QTY 2

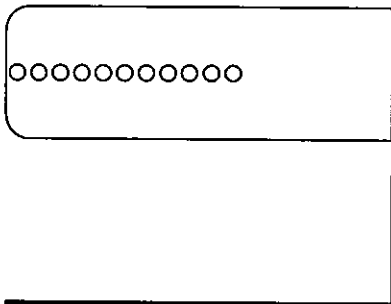


WALL ATTACHING BRACKET
QTY 1

NOTE: THE ATTACHING BRACKET CAN BE MOUNTED WITH THE FLANGE UP OR DOWN. WALL ATTACHING HARDWARE NOT INCLUDED.



PARAGON
FURNITURE INC.


NOTE: THE SHELVING
ACCESSORY BACK
REPLACES THE
UNITIZER BRACES.

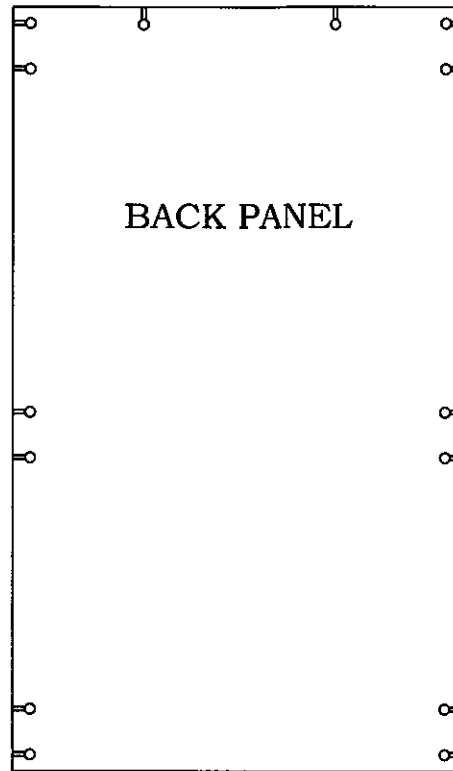

ASSEMBLY INSTRUCTION FOR ACCESSORY BACK 42-AB, 48-AB, 60-AB, 72-AB, 84-AB

ITEM	DESCRIPTION
1	BACK PANEL

HARDWARE



CAM
SCREW

QTY.

42-AB	48-AB	60-AB	72-AB	84-AB
10	10	14	14	14

1. INSTALL CAM SCREWS INTO HOLES ALONG BACK EDGES OF SHELVING END PANELS AND SHELVING TOP SCREW INTO PANEL UNTIL SHOULDER REST ON SURFACE OF PANEL (CENTER ON DOUBLE FACED UNITS).
2. TO ASSEMBLE SHELVING UNIT HOLD END PANEL IN UPRIGHT POSITION SLIDE BACK PANEL ONTO CAM SCREWS AND LOCK INTO PLACE BY TURNING THE CAM CLOCKWISE 210 DEGREES.
3. REPEAT STEP 2 WITH THE OTHER END PANEL
4. PUSH BOTTOM SHELF ONTO CONNECTORS AND LOCK INTO PLACE BY TURNING THE SCREW IN CONNECTORS 1/2 TURN CLOCKWISE. (NOTE: YOU WILL NEED A SHORT STUBBY PHILLIPS SCREWDRIVER TO DO THIS).
5. INSTALL BASE WITH EDGE BANDED EDGE DOWN TOWARD THE FLOOR JUST LINE IT UP AND GIVE IT A FIRM PUSH ONTO THE CONNECTORS.
6. INSTALL TOP PUSH DOWN ONTO CONNECTORS AND LOCK INTO PLACE.
7. INSTALL THE REST OF THE SHELVES IN THE DESIRED LOCATION.