



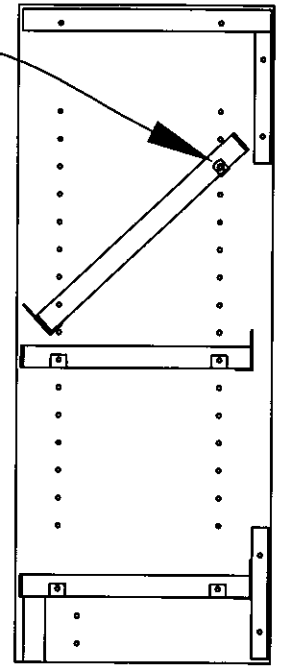

**PARAGON**  
FURNITURE LP.

ZINC SHELF  
SUPPORT

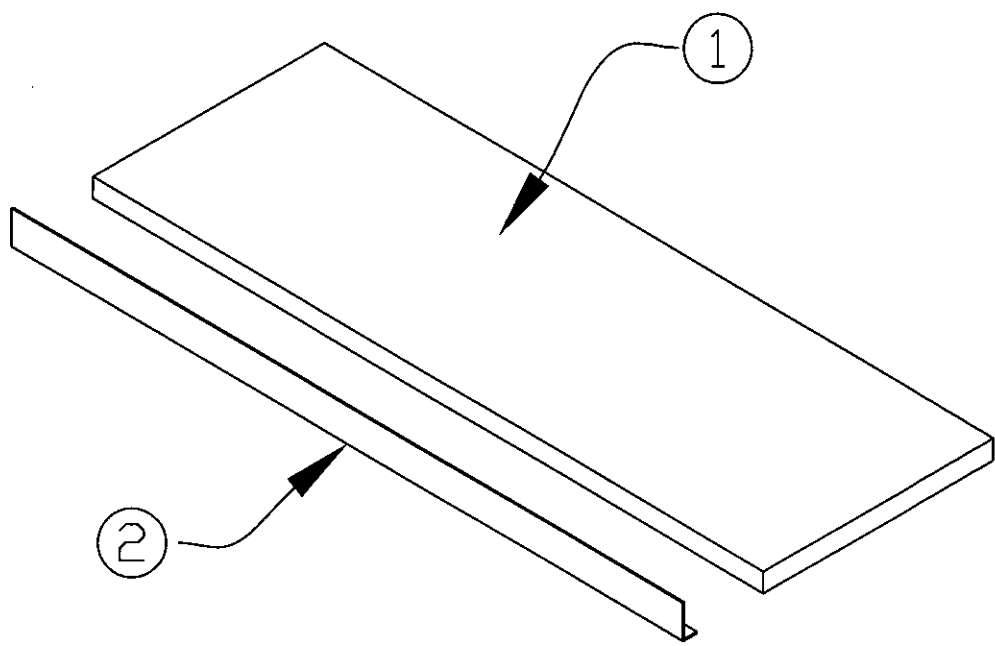

## ASSEMBLY INSTRUCTION FOR MAGAZINE SHELF

**ITEM**

**DESCRIPTION**


- |   |                |
|---|----------------|
| 1 | MAGAZINE SHELF |
| 2 | DEFLECTASTOP   |

1. INSTALL DEFLECTASTOP ONTO BOTTOM OF MAGAZINE SHELF USING #8 X 3/4" SCREWS.



#8 x 3/4" FLAT  
HEAD SCREW

2. PLACE 2 ZINC SHELF SUPPORT IN DESIRED LOCATION TOWARDS BACK OF SHELVING UNIT.

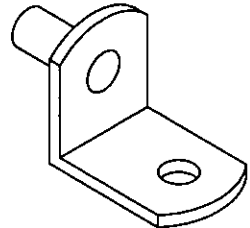

ZINC SHELF  
SUPPORT


QTY. 2  
(PER SHELF)

3. PLACE MAGAZINE SHELF ONTO ZINC SHELF SUPPORTS AND SCREW UP THROUGH HOLE IN SHELF SUPPORT WITH 2, #6 X 1/2" PAN HEAD SCREWS INTO PRE DRILLED HOLE IN WOOD SHELF.



BRONZE SHELF  
SUPPORT

QTY. 2  
(PER SHELF)



#6 x 1/2" PAN  
HEAD SCREW

QTY. 2  
(PER SHELF)